

Fitting instructions

Assembling An Emperor Jersey Bed

Applies to Emperor sizes:

7ft (213.4cm) wide x 6ft 6ins (200cm) long

7ft (213.4cm) wide x 7ft (213.4cm) long

What's included

Your bed is held together with a combination of four white U clips (A) which hold the two parts of each side together and two Crocodile clips (B) already attached to the bed base which hold the two linked sides together. Please ensure you identify all the parts.


1. Unpack and lay the bases upside down. Push the feet firmly into each corner ensuring they are fully inserted.
2. Turn each part of the bed the right way up and place into position. Please do not attempt to link anything at this stage. If you have specified continental drawers, ensure they are at the top end of the bed.
3. Now turn the two parts that form each side of the bed on their sides, and insert the plastic U clips to link the two parts together (see C).
4. Carefully lower each side of the bed down having linked it.
5. Identify the two parts of the crocodile clips (see B); the crocodile part and the receiving metal block. Rotate the crocodile part until it is protruding.
6. Gently push the two halves of the bed together ensuring that the crocodile clips catch on the receiving metal block on the other half of the bed.

If you want to separate the beds, ensure you lift the side of the bed containing the receiving metal block.

NOTE: DO NOT LIFT THE SIDE WITH THE CROCODILE CLIP AS YOU WILL BREAK IT.



A. U clips (x 4)

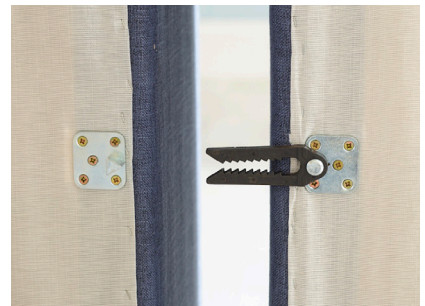

B. Crocodile clips – pre-attached (x2)



C. U clips (once inserted)